



1. put ② on the position of ①, then put the plastic cover ③ on the position of ①②, and fix it.


2. after fix the ①②③, the insert ② into the hole of board on ④, then fix it with 6 pieces of 4*15mm self-drilling screw.

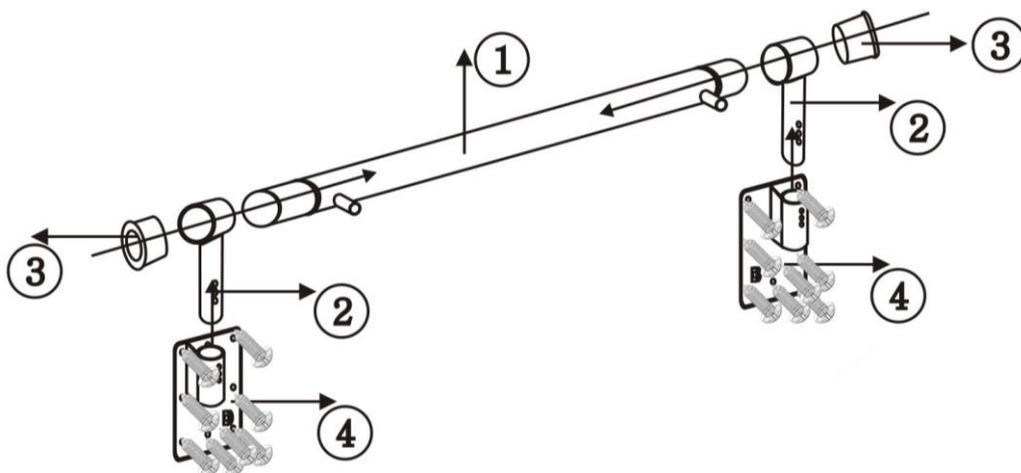

3. after install the ①②③④ material. Put the tube ① on the same level of SPA surface and fix it with 16 pieces of 4*15mm self-drilling screws.

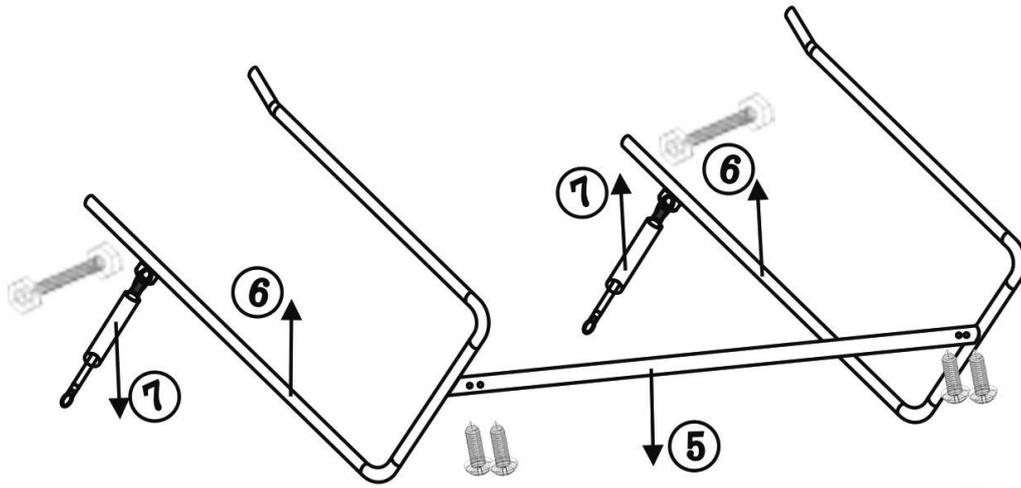


4. insert tube ⑤ into the tube ⑥, then fix it with 16 pieces of 4*15mm self-drilling screws. Then put pneumatic nozzle link of ⑦ on the position of ⑥, then fix it with 2 pieces of 8*40mm screws with screw cap.

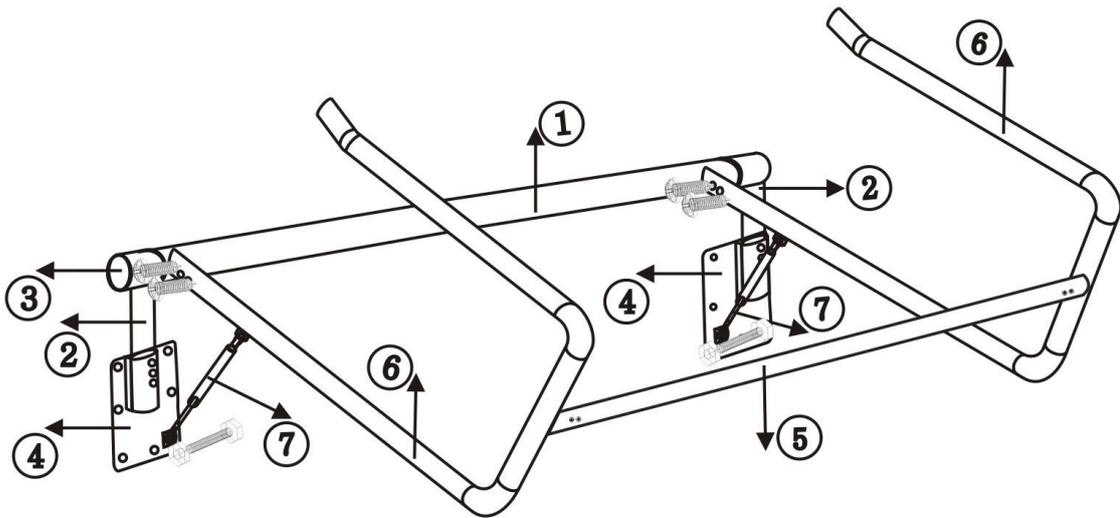


5. after install the ⑤⑥⑦, insert it into the tube ① and fix it with 4 pieces of 4*15mm self-drilling screws. Then connect the pneumatic nozzle link of ⑦ to the board of ④, and fix it with 2 pieces of 8*40mm screws with screws cap.

6. the installation position on the SPA is as following:

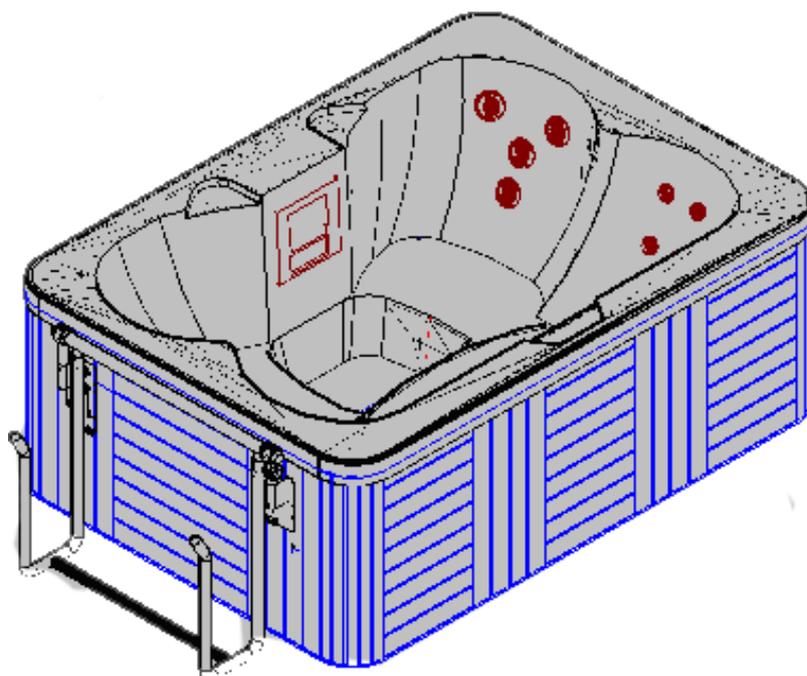

Screw list:

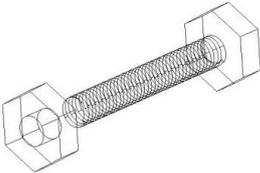screw	picture	size	quantity	unit
self-drilling screw		4*15mm	30	piece
screws with screws cap		8*40mm	4	piece